Mi-T-M®
CORPORATION

Propane
Patio Heaters
OPERATOR'S MANUAL
MH-0040-PM10

CAUTION
RISK OF INJURY! READ ENTIRE MANUAL BEFORE OPERATING!
THIS MANUAL IS AN IMPORTANT PART OF THE HEATER
AND MUST REMAIN WITH THIS UNIT!

CERTIFIED ® DESIGN CERTIFIED ® C US

247218

©Copyright 2009, Mi-T-M Corporation®

37-1070-E/F/S-102114

TABLE OF CONTENTS

INTRODUCTION....3
IMPORTANT SAFETY INSTRUCTIONS....4
PATIO HEATER FEATURES....7
FEATURES....7
HEATER SPECIFICATIONS....7
GENERAL SAFETY INFORMATION....8
IMPORTANT SAFETY INFORMATION....8
ASSEMBLY....9
ASSEMBLING THE HEATER (PM10 BEFORE SERIAL #5450 1014 00001)....9
ASSEMBLING THE HEATER (PM10 AFTER SERIAL #5450 1014 00001)....10-11
OPERATION....12
LIGHTING INSTRUCTIONS....12
AFTER FIRST LIGHTING....12
WHEN HEATER IS ON....12
RELIGHTING....13
SHUT DOWN INSTRUCTIONS....13
MAINTENANCE....14
STORAGE....14
BETWEEN USES....14
DURING EXTENDED PERIODS OR WHEN TRANSPORTING....14
TROUBLESHOOTING....15
STATEMENT OF WARRANTY....16

WARNING
NEVER LEAVE HEATER UNATTENDED WHILE BURNING OR WHILE CONNECTED TO A POWER SOURCE.

⚠WARNING

Warning: This product contains lead, a chemical known to the State of California to cause birth defects or other reproductive harm.
Wash your hands after handling this product.

⚠WARNING

This product contains one or more chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

INTRODUCTION

Congratulations on the purchase of your new Mi-T-M® Patio Heater! You can be assured your Mi-T-M® Heater was constructed with the highest level of precision and accuracy. Each component has been rigorously tested by technicians to ensure the quality, endurance and performance of this heater.

This operator's manual was compiled for your benefit. By reading and following the simple safety, installation and operation, maintenance and troubleshooting steps described in this manual, you will receive years of trouble free operation from your new Patio Heater. The contents of this manual are based on the latest product information available at the time of publication. The Manufacturer reserves the right to make changes in price, color, materials equipment, specifications or models at any time without notice.

IMPORTANT!

A "DANGER, WARNING or CAUTION" safety warning will be surrounded by a "SAFETY ALERT BOX". This box is used to designate and emphasize Safety Warnings that must be followed when operating this heater. Accompanying the safety warnings are "Signal Words" which designate the degree or level of hazard seriousness. The "Signal Words" used in this manual are as follows:

DANGER: INDICATES AN IMMINENTLY HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, WILL RESULT IN DEATH OR SERIOUS INJURY.

WARNING: INDICATES A POTENTIALLY HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, COULD RESULT IN DEATH OR SERIOUS INJURY.

CAUTION: INDICATES A POTENTIALLY HAZARDOUS SITUATION WHICH, IF NOT AVOIDED MAY RESULT IN MINOR OR MODERATE INJURY OR DAMAGE TO THE HEATER.

The symbols set below are "Safety Alert Symbols". These symbols are used to call attention to items or procedures that could be dangerous to you or other persons using this equipment.

ALWAYS PROVIDE A COPY OF THIS MANUAL TO ANYONE USING THIS EQUIPMENT. READ ALL INSTRUCTIONS IN THIS MANUAL AND ANY INSTRUCTIONS SUPPLIED BY MANUFACTURERS OF SUPPORTING EQUIPMENT BEFORE OPERATING THE HEATER AND ESPECIALLY POINT OUT THE "SAFETY WARNINGS" TO PREVENT THE POSSIBILITY OF PERSONAL INJURY TO THE OPERATOR.

Once the unit has been uncrated, immediately write in the serial number of your unit in the space provided below.

SERIAL NUMBER _____

Inspect for signs of obvious or concealed freight damage. If damage does exist, file a claim with the transportation company immediately. Be sure that all damaged parts are replaced and that the mechanical and electrical problems are corrected prior to operation of the unit. If you require service, contact Mi-T-M® Customer Service.

Mi-T-M® Corporation, 8650 Enterprise Drive, Peosta, IA 52068
563-556-7484 / 800-553-9053 / Fax 563-556-1235
Monday - Friday 8:00 a.m. - 5:00 p.m. CST

Please have the following information available for all service calls:

1. Model Number
2. Serial Number
3. Date and Place of Purchase

IMPORTANT SAFETY INSTRUCTIONS

Hazard	Potential Consequence	Prevention
RISK OF EXPLOSION OR FIRE	Serious injury may occur if the heater air inlet or outlet is blocked.	Always operate heater in a well ventilated area free of flammable vapors, combustible dust, gases or other combustible materials.
		Do not insert or allow any foreign objects to enter any ventilation or exhaust opening as this may cause a fire, or damage to the heater.
	Serious injury or death may occur, if heater is running while operating.	This heater is EXTREMELY HOT while in operation.
		Bulk fuel storage should be a minimum of 25 ft. from heaters, torches, portable generators, or other sources of ignition. All fuel storage should be in accordance with federal, state, or local authorities having jurisdiction.
		Never move or handle heater while still hot.
	Serious injury may occur if heater is not placed on level surface.	Always locate heater on a stable level surface.
		Always keep away from children and animals.
	Serious injury or death may occur if a flame is used to test for leaks.	Do Not use a flame to test for leaks. Follow Checking for Leaks on page 9.
RISK OF BURNS	Serious injury could occur from touching exposed metal parts. These areas can remain hot for some time after the heater is turned off.	Never allow any part of your body or other materials to make contact with any exposed metal parts on the heater.

⚠ WARNING: NEVER LEAVE HEATER UNATTENDED WHILE BURNING OR WHILE CONNECTED TO A POWER SOURCE.

IMPORTANT SAFETY INSTRUCTIONS

NEVER USE THE HEATER IN LOCATIONS WHICH CONTAIN PRODUCTS SUCH AS GASOLINE, SOLVENTS, PAINT THINNERS, DUST PARTICLES, VOLATILE OR AIRBORNE COMBUSTIBLES, OR ANY UNKNOWN CHEMICALS.

WARNING: IF THE INFORMATION IN THIS MANUAL IS NOT FOLLOWED EXACTLY, A FIRE OR EXPLOSION MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

AN LP CYLINDER NOT CONNECTED FOR USE SHALL NOT BE STORED IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

PROPOSITION 65 WARNING: FUELS USED IN GAS, WOOD BURNING OR OIL-FIRED APPLIANCES, AND THE PRODUCTS OF COMBUSTION OF SUCH FUELS, CONTAIN CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS AND OTHER REPRODUCTIVE HARM.

WARNING: NOT FOR USE INSIDE; FOR OUTSIDE USE ONLY.

! SAVE THESE INSTRUCTIONS !

⚠ WARNING ⚠

THE FOLLOWING PAGES CONTAIN OPERATING AND MAINTENANCE INSTRUCTIONS.

DO NOT ATTEMPT TO OPERATE THIS PATIO HEATER UNTIL YOU HAVE READ AND UNDERSTOOD ALL SAFETY PRECAUTIONS AND INSTRUCTIONS LISTED IN THIS MANUAL.

INCORRECT OPERATION OF THIS UNIT CAN CAUSE SERIOUS INJURY!!

DO NOT ALTER OR MODIFY THIS EQUIPMENT IN ANY MANNER!

NEVER LEAVE HEATER UNATTENDED WHILE BURNING OR WHILE CONNECTED TO A POWER SOURCE.

PATIO HEATER FEATURES

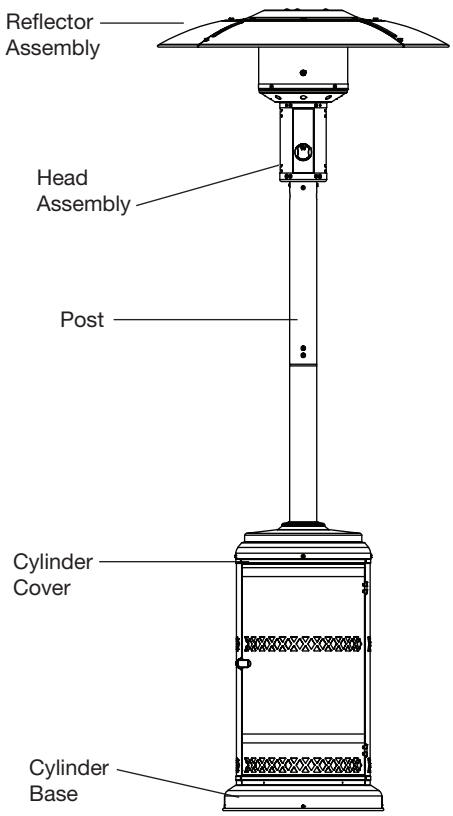

FEATURES

The Propane Patio Heater comes with safety features including anti-tilt switch and auto shutoff switch. The features of the Propane Patio Heater is shown.

HEATER SPECIFICATIONS

Model	**MH-0040-PM10**
Rating BTU/Hr	40,000
Fuel	Propane LP
Supply Pressure	250 PSI max
Manifold Pressure	11" W.C.
Size (Height)	7'2"
Size (Diameter)	32 5/16"
Net Weight (Lbs)	59
Cylinder Required	20lb

GENERAL SAFETY INFORMATION

⚠ WARNING: IMPROPER USE OF THIS HEATER CAN RESULT IN SERIOUS INJURY OR DEATH FROM BURNS, FIRE AND OR EXPLOSION.

IMPORTANT: Read this User's Manual carefully and completely before attempting to operate or service this heater. Improper use of the heater can cause serious injury or death from fire and explosion.

Every possible circumstance that may involve a hazard cannot be anticipated. The warnings in this manual and attached to the unit are therefore not all-inclusive. If a procedure, work method or operating technique not specifically recommended by the manufacturer is used, you must be sure it is safe for you and others. You should also insure that equipment will not be damaged or made unsafe by the operating or maintenance method you choose.

IMPORTANT SAFETY INFORMATION

1. Keep solid combustibles, such as building materials, paper or cardboard a safe distance away from the heater as recommended by the instructions in this manual (at least 2 feet away from sides and 3 feet from top of head assembly).
2. These heaters are design certified as gas-fired infrared patio heaters under CSA 2901-81 standards.
3. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Do not move heater when in use OR for at least 45 minutes after using.
4. Keep combustible materials, such as furniture, pillow, bedding, papers, clothes and curtains at least 2 feet away from sides and 3 feet from top of head assembly.
5. Do not operate any heater with a damaged regulator or after the heater malfunctions, or has been dropped or damaged in any manner. Return heater to an authorized service facility for examination, or mechanical adjustment, or repair.
6. Do not use this heater in a residential or household area. For OUTDOOR use only. If stored indoors, detach and leave the LP cylinder outdoors.
7. Never replace the regulator with any regulator other than the factory suggested replacement.
8. This heater should be secured or moved inside if winds exceed 22 miles per hour to prevent damage to heater.
9. Do not insert or allow any foreign objects to enter any ventilation or exhaust opening as this may cause a fire, or damage to the heater.
10. Do not paint emitter screen, control panel or reflector assembly.
11. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause a fire or injury to persons.
12. Be sure heater is used where fresh air ventilation is available.
13. Do not modify or alter this heater in any way or operate any heater that has been modified from its original state. For example, do not use heater without reflector assembly or emitter screen.
14. It is hard to anticipate every use which may be made of the heater. Check with your local fire safety authority if you have any questions about heater application.
15. Be sure heater is on a solid and level surface.
16. Do not shorten the burner post assembly.

⚠ WARNING: NEVER LEAVE HEATER UNATTENDED WHILE BURNING OR WHILE CONNECTED TO A POWER SOURCE.

THE PROPANE (LP) CYLINDER MUST ALSO BE EQUIPPED WITH THE FOLLOWING:

1. A collar to protect the gas valve.
2. A shut-off valve terminating a LP cylinder valve outlet as specified in the American National Standard for Compressed Gas Cylinder Valve Outlets and Inlet Connections.
3. A safety relief valve having direct communications with the vapor space of the LP cylinder.
4. An arrangement of vapor withdrawal.

   You must provide the propane gas and cylinder(s). Use this heater only with a propane vapor withdrawal supply system. Refer to Chapter 5 of the Standard for Storage and Handling of Liquefied Petroleum Gas, ANSI/NFPA 58. Your local library or fire department will have this booklet.

ASSEMBLY FOR MH-0040-PM10 (BEFORE SERIAL # 5450 1014 00001)

ASSEMBLING THE HEATER

Note: Tools required: 7/16" Wrench, 3/8" Open End Wrench, Adjustable opening Wrench 8" long, Phillips screwdriver

1. **Attach post to base assembly.** Attach the Post to the post mounts using M5 x 12 Bolts (6 pcs).
2. **Attach cylinder cover.** Attach the Cylinder Cover to the post mounts.
3. **Attach the upper pole to the lower pole** by four M4 x 8 bolts.
4. **Attach head assembly to post.** Load Head Assembly by inserting Gas Hose into Post. Insert Head Assembly into Post. Tighten securely using M5x12 Bolts (4 pcs).
5. **Assembly of reflector.** Attach Reflector Cap to top of reflector (4 pcs) using the M6 x 10mm Bolts (12 pcs), 6mm Washers (12 pcs) and M6 Nuts (12 pcs) as shown.
6. **Attach the reflector** assembly to top of head assembly, Load the Reflector Assembly to the top of the Head Assembly using M6 x 10 (3 pcs), 6mm Washers (3 pcs).
7. **Connect gas line to LP cylinder.** Attach Gas Hose to the Regulator with 3/8" open end wrench and adjustable wrench, then fix it iwth the fixing chain. Attach Regulator to LP cylinder. Tighten securely, then move LP cylinder to the plate of the Base assembly.
8. **Check for leaks.** All factory connections of your Patio Heater have been checked. To check the connections of the Gas Hose / Regulator / LP cylinder:
   1. Make leak test solution by mixing 1 part liquid dish soap and 3 parts water.
   2. Spoon several drops (or use a squirt bottle) of the solution onto the Gas Hose/Regulator or the Regulator/LP cylinder connection
   3. Inspect the connections and look for bubbles.
   4. If no bubbles appear, the connection is safe. **Do not use a flame to test for leaks!.**
   5. If bubbles appear, then there is a leak. Loosen and re-tighten the connection where bubbles are present.
9. **Lower LP cylinder cover onto cylinder base.** Lower the LP cylinder cover onto the Cylinder Base.
10. **Disconnect LP cylinder when storing or transporting.** Turn off heater and turn off valve on LP cylinder. Disconnect the Regulator and remove LP cylinder.

NOTE: Turn off valve on gas cylinder when heater is not in use.

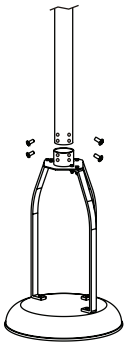

1.



2.

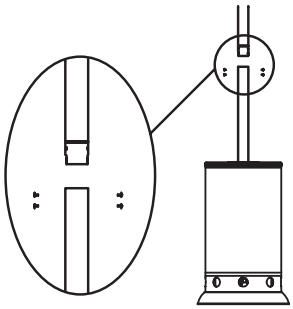

3.

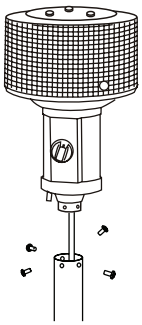

4.

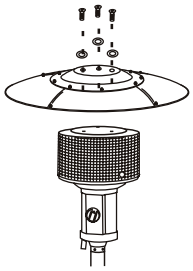

5.

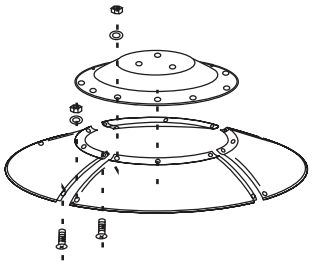

6.

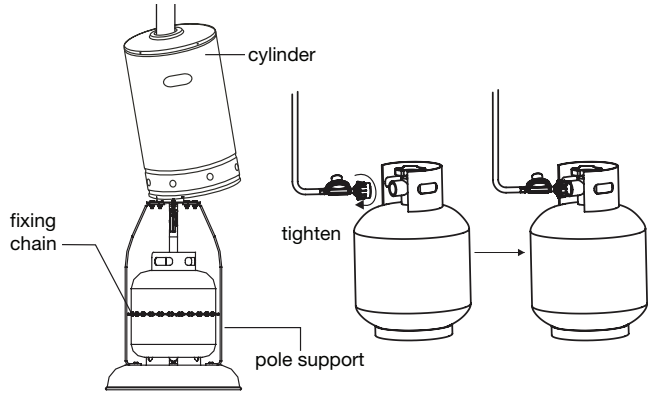

7.

ASSEMBLY FOR MH-0040-PM10 (AFTER SERIAL # 5450 1014 00001)

ASSEMBLING THE HEATER

Note: Tools required: 7/16" Wrench, 3/8" Open End Wrench, Adjustable opening Wrench 8" long, Phillips screwdriver

1. Attach the wheel assembly with 2x 6mm washers / 2x 6mm lock washers / 2x M6x20 bolts.
2. **Attach post to base assembly.** Attach the Post to the post mounts using M6 x 20 Bolts (4 pcs). Use flange cover after tightening bolts.
3. **Attach head assembly to post.** Load Head Assembly by inserting Gas Hose into Post. Insert Head Assembly into Post. Tighten securely using M5x12 Bolts (4 pcs).
4. **Attach the upper pole to the lower pole** by six M4 x 8 bolts.

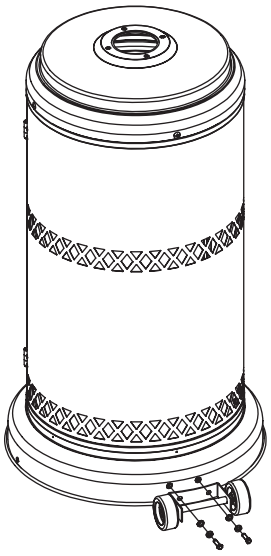

1.

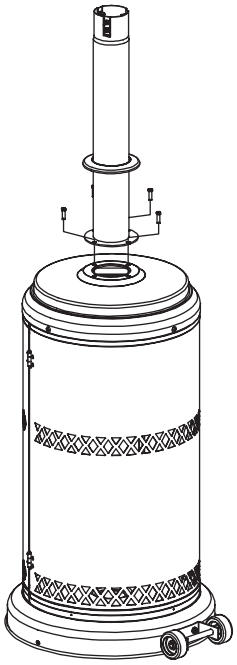

2.

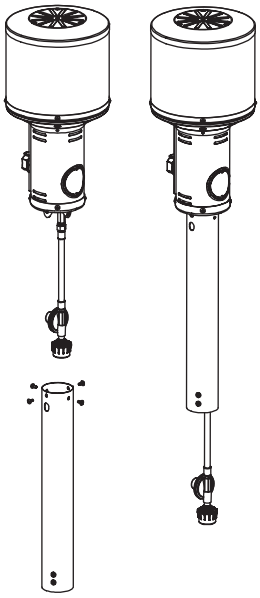

3.

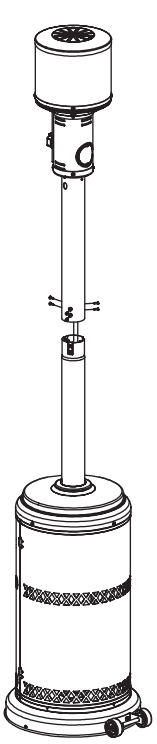

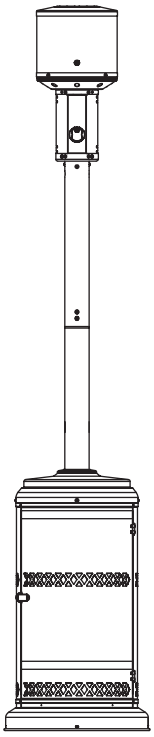

4.

5. **Assembly of reflector.** Attach Reflector Cap to top of reflector (4 pcs) using the M6 x 10mm Bolts (12 pcs), 6mm Washers (12 pcs) and M6 Nuts (12 pcs) as shown.
6. **Attach the reflector assembly to top of head assembly,** Load the Reflector Assembly to the top of the Head Assembly using M6 x 10 (3 pcs), 6mm Washers (3 pcs).

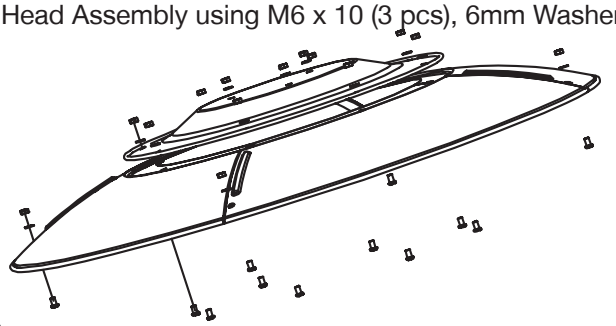

5.

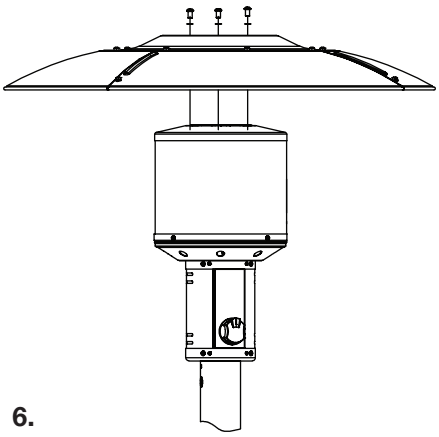

6.

ASSEMBLY FOR MH-0040-PM10 (AFTER SERIAL # 5450 1014 00001)

7. Fill the base with sand as a counter weight.

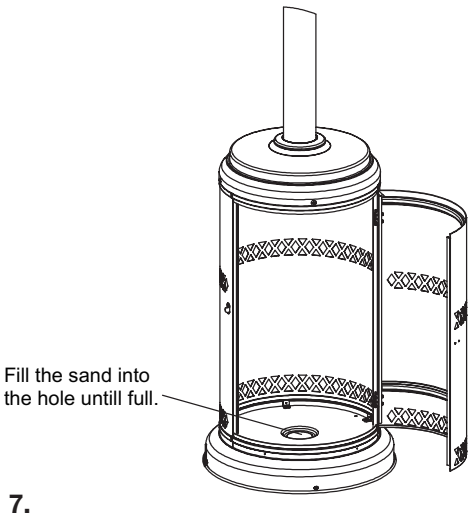

7.

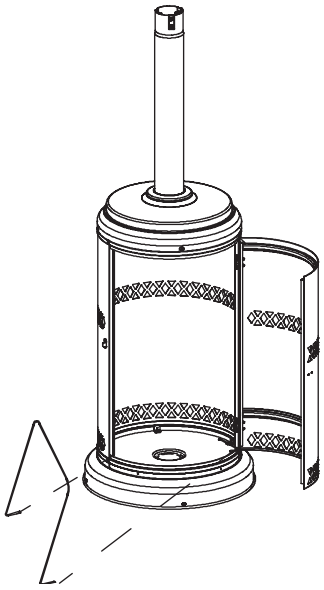

8.

8. Install cylinder guard to the base.
9. **Connect gas line to LP cylinder.** Attach Gas Hose to the Regulator with 3/8" open end wrench and adjustable wrench. Attach Regulator to LP cylinder. Tighten securely, then move LP cylinder to the plate of the Base assembly.

   NOTE: All leak test procedures should be completed before use.

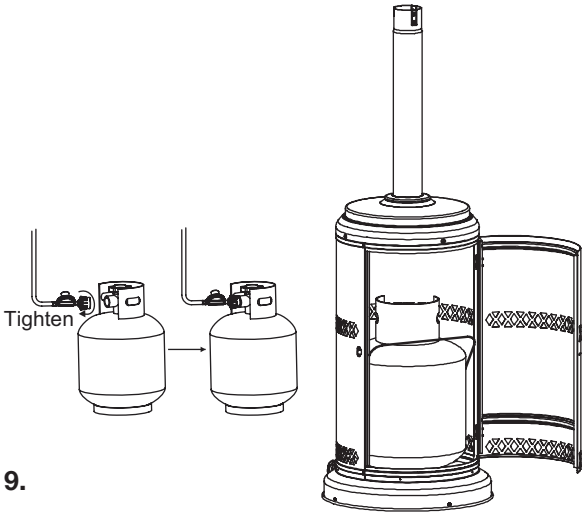

9.

10. **Check for leaks.** All factory connections of your Patio Heater have been checked. To check the connections of the Gas Hose / Regulator / LP cylinder:

    a. Make leak test solution by mixing 1 part liquid dish soap and 3 parts water.

    b. Spoon several drops (or use a squirt bottle) of the solution onto the Gas Hose/Regulator or the Regulator/LP cylinder connection

    c. Inspect the connections and look for bubbles.

    d. If no bubbles appear, the connection is safe. **Do not use a flame to test for leaks!.**

    e. If bubbles appear, then there is a leak. Loosen and re-tighten the connection where bubbles are present.

11. **Close access door on base cover.**
12. **Disconnect LP cylinder when storing or transporting.** Turn off heater and turn off valve on LP cylinder. Disconnect the Regulator and remove LP cylinder.

    NOTE: Turn off valve on gas cylinder when heater is not in use.

OPERATION

Mi-T-M Propane Patio Heaters are designed for the heating of outdoor patios, decks, spas, pool and open working areas.

WARNING: BEFORE TURNING GAS SUPPLY ON YOUR PROPANE PATIO HEATER WAS DESIGNED AND APPROVED FOR OUTDOOR USE ONLY. DO NOT USE THIS HEATER INSIDE A BUILDING, OR ANY ENCLOSED AREA.

WARNING: BEFORE LIGHTING, HEATER SHOULD BE THOROUGHLY INSPECTED BEFORE EACH USE, AND BY A QUALIFIED PERSON AT LEAST ONCE A YEAR.

If relighting a hot heater, wait at least 5 minutes. See space tolerances below.

LIGHTING INSTRUCTIONS

1) Inspect Regulator/Hose assembly prior to each use of the heater
2) Turn the control knob to "OFF" position.
3) Turn LP cylinder gas valve to fully open position.
4) Push in control knob and turn counter clockwise to "HIGH" position, If you want a lower temperature, push in the control knob and turn clockwise to the “LOW” position.
5) Once the burner is lit, keep the control knob depressed for approx. 30 seconds. Then release the control knob.
6) If the burner does not stay lit, repeat steps 3 and 4.
7) If the burner still does not stay lit, proceed as follows:
   a) Push in gas control knob and turn counter clockwise to the "LOW" position.
   b) Keep depressing the control knob, put a long stem lighter into the ignition hole on the emitter screen. To light the burner.
   c) Repeat step 4.

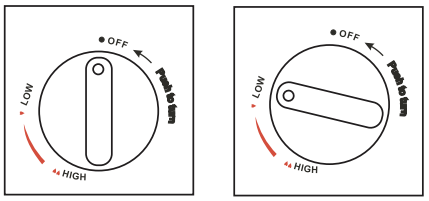

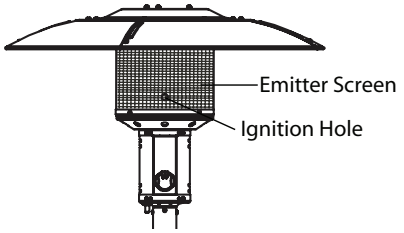

FLAME CHARACTERISTIC

The flame pattern at the emitter screen should be visually checked whenever heater is operated. Normally the burner flame is blue, but little yellow flame is acceptable.

If flames extend beyond surface of the emitter grid , or the phenomena of flame lift or light back, or black spot is accumulating on the emitter grid or reflector, the heater should be turned off immediately. The heater should not be operated again until the unit is serviced and or repaired.

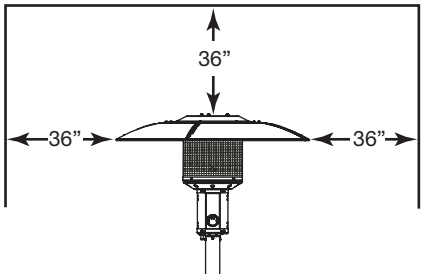

WARNING: DO NOT TOUCH OR MOVE HEATER FOR AT LEAST 45 MINUTES AFTER USE. ALLOW EMITTER AND REFLECTOR TO COOL BEFORE TOUCHING.

WARNING: IF AT ANYTIME YOU ARE UNABLE TO LIGHT THE BURNER AND SMELL GAS, WAIT 5 MINUTES TO ALLOW GAS TO DISSIPATE BEFORE ATTEMPTING TO LIGHT AGAIN.

AFTER FIRST LIGHTING

The burner may be noisy when initially turned on. To eliminate excessive noise form the burner, set the Control Knob to “LOW”, then turn the Control Knob to heat level desired.

White smoke may appear around the Emitter Screen during the first few minutes of initial lighting. This is the heater burning up the oil used in manufacturing. Both smoke and odor will dissipate after approximately 30 minutes.

OPERATION

WHEN HEATER IS ON

The Emitter Screen will become bright red due to the intense heat. Burner may display tongues of blue flame. These flames should not be yellow or produce thick black smoke, which indicates that there is an obstruction of airflow through the burners.

If flame is very low it is because there is not enough pressure. Check your LP cylinder.

RELIGHTING

1) Turn the Control Knob to the “OFF" position.

2) Wait at least 5 minutes before attempting to relight.

3) Repeat steps beginning with step 2 under ‘Lighting Instructions’.

SHUT DOWN INSTRUCTIONS

1) Push in and turn Control Knob to the “OFF” position.

2) Turn gas valve on LP cylinder clockwise until tight to close.

WARNING: ALWAYS BE SURE CONTROL KNOB IS OFF AND CYLINDER IS OFF WHEN LEAVING HEATER. NEVER LEAVE THIS PATIO HEATER UNATTENDED WHILE IN USE.

NOTE: After use, some discoloration of the emitter screen is normal.

DANGER: DO NOT TOUCH OR MOVE HEATER DURING OPERATION OR FOR AT LEAST 45 MINUTES AFTER USE. SERIOUS INJURY OR DEATH MAY OCCUR.

MAINTENANCE

To enjoy years of performance from your heater be sure to perform the following maintenance activities on a regular basis:

1. The flame pattern at the Emitter Screen should be visually checked whenever the heater is operated. Normally the burner flame is blue, but little yellow flame is acceptable.
2. Keep the exterior surfaces clean by using warm soapy water. Never use flammable or corrosive cleaning agents.
3. Be SURE to keep the area around the burner and pilot assembly dry at all times. If the gas control is exposed to water in any way, do not try to use it. It may need to be replaced.
4. Air flow must be UNOBSTRUCTED. Keep controls, burner and circulating air passageways clean. Signs of possible blockage include:

   a. Gas odor with extreme yellow tipping of flame.
   b. Heater does not reach the desired temperature.
   c. Heater glow is excessively uneven.
   d. Heater makes popping noises.
5. Spiders and insects can nest in burner or orifices. This dangerous condition can damage the heater and render it unsafe for use. Clean burner holes by using a heavy-duty pipe cleaner. Compressed air may help clear away smaller particles.
6. Carbon deposits may create a fire hazard. Clean dome and emitter with warm soapy water if any carbon deposits develop. At least ONCE A YEAR check the section of the hose inside the post.
7. In salt-air environments (such as near an ocean) corrosion occurs more quickly than normal. Frequently check for corroded areas and repair them promptly.

STORAGE

BETWEEN USES

1. Turn Control Knob to OFF position
2. Turn control valve on LP cylinder to OFF.
3. Store your Patio Heater upright in a dry place that is sheltered from inclement weather such as rain, sleet, hail, snow, dust and debris. DO NOT store Patio Heater indoors with LP cylinder still connected.
4. If desired, cover heater to protect exterior surfaces and to help prevent debris in air passageways.

DURING EXTENDED PERIODS OR WHEN TRANSPORTING

1. Turn control knob to OFF position
2. Disconnect LP cylinder and move to a well-ventilated location outdoors. Do not store LP cylinder indoors.
3. Store your Patio Heater upright in a dry place that is sheltered from inclement weather such as rain, sleet, hail, snow, dust and debris.
4. If desired, cover heater to protect exterior surfaces and to help prevent debris in air passageways.

   NOTE: Wait until Patio Heater is completely cool before covering.

TROUBLESHOOTING

SYMPTOM	PROBABLE CAUSE	REMEDY
Burner will not light.	1. Pressure is low.	1. LP cylinder is near empty. Refill LP cylinder.
	2. Orifice blocked.	2. Remove and clean and replace if needed.
	3. Control valve is not ON.	3. Turn valve to ON.
	4. Thermocouple is bad.	4. Replace thermocouple.
	5. Pilot light assembly is bent or not in the correct location.	5. Place pilot in proper position and retry.

STATEMENT OF WARRANTY

Mi-T-M warrants this heater to the original retail purchaser only, to be free from defects in material and workmanship for a period of

one (1) year from the date of initial purchase.

This product must be properly installed, maintained and operated in accordance with the instructions provided. Mi-T-M requires reasonable proof of your date of purchase from an authorized retailer or distributor. Therefore, you should keep your sales slip, invoice, or cancelled check from the original purchase.

EXCLUSIONS

1. This Limited Warranty shall be limited to the repair or replacement of parts, which prove defective Mi-T-M shall determine at its reasonable discretion. This warranty does not include wear items: filters, vanes, nozzles, and rotors.

2. This Limited Warranty does not cover any failures or operating difficulties due to normal wear and tear, accident, abuse, misuse, alteration, misapplication, improper installation or improper maintenance and service by you or any third party. Failure to perform normal and routine maintenance on the heater, shipping damage, damage related to insects, birds, or animals of any kind, and damage due to weather conditions are also not covered.

3. In addition, the Limited Warranty does not cover damage to the finish, such as scratches, dents, discoloration, rust or other weather damage, after purchase.

All transportation costs for the return of the damaged product or parts will be the responsibility of the purchaser. Upon receipt of damaged item, Mi-T-M will examine the item and determine if defective. Mi-T-M will repair or replace and return the item, freight pre-paid. If Mi-T-M finds the item to be in normal operating condition, or not defective, the item will be returned freight collect.

This Limited Warranty is in lieu of all other express warranties. Mi-T-M disclaims all warranties for products that are purchased from sellers other than authorized retailers or distributors.

AFTER THE PERIOD OF THE ONE (1) YEAR EXPRESS WARRANTY EXPIRES, Mi-T-M DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR APPLICATION. FURTHER, Mi-T-M SHALL HAVE NO LIABILITY WHATSOEVER TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

Mi-T-M assumes no responsibility for any defects caused by third parties. This Limited Warranty gives the purchaser specific legal rights; a purchaser may have other rights depending upon where he or she lives. Some states do not allow the exclusion or limitation of special, incidental or consequential damages, or limitations on how long a warranty lasts, so the above exclusion and limitations may not apply to you. Mi-T-M does not authorize any person or company to assume for it any other obligation or liability in connection with the sale, installation, use, removal, return, or replacement of its equipment, and no such representations are binding on Mi-T-M. Always be sure to specify model number and serial number when making any claim with Mi-T-M.

For Service or Warranty Consideration, contact
Mi-T-M® Corporation, 8650 Enterprise Drive, Peosta, IA 52068
563-556-7484 / 800-553-9053 / Fax 563-556-1235
Monday - Friday 8:00 a.m. - 5:00 p.m. CST